 


IR remote control Distance 2010

Operating instructions



Art. no. MTN570222

Technical data

Number of channels:	10
Operating principle:	infrared communication with TELE receiver via telegram. Coding suitable for the TELE receiver
Display:	Red LED lights up during transmission. If the LED only lights up briefly while transmitting or goes out, the battery is empty
Range:	approx. 20 m. Maximum range for direct visual contact. The range is reduced if there is reflection on walls and ceilings or it is subject to bright light
Battery:	2 microcells type: IEC LR 0.3 AAA (not included)

For your safety



CAUTION

To prevent damage to people or loads, switch using the remote control only when you have visual contact to the loads.

Getting to know the remote control

The 10-channel DISTANCE 2010 remote control activates all TELE sensor covers, blind push-buttons with IR receivers, presence detectors with IR receivers and KNX devices with IR receivers.

Pressing the relevant push-button briefly is sufficient to switch a receiver. To vary the brightness level, press the relevant push-button until the required intensity of brightness is achieved.

Put the remote control into operation

- ① Insert battery (see "Changing batteries")
- ② Specify the channel number of the receiver (channels are assigned at the receiver)
- ③ Check function

How to change the battery

There is a flat lid on the rear of the transmitter:

- ① Push this lid to the side to open it.
- ② Insert the batteries and make sure they contact the correct poles.
- ③ Re-insert the flat lid and push it closed.

Schneider Electric Industries SAS

If you have technical questions, please contact the Customer Care Center in your country.

www.schneider-electric.com

This product must be installed, connected and used in compliance with prevailing standards and/or installation regulations. As standards, specifications and designs develop from time to time, always ask for confirmation of the information given in this publication.