

IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

INSULATED CEILING, CHICAGO PLENUM AND AIRTIGHT INSTALLATION (IC / CP / AT) INTEGRAL DRIVER (120V / 120-277V) DIMMING 0-10V (D10), DALI (DA), TRIAC / ELV (LTE)

A- CONNECT THE DRIVER TO THE FEEDER CABLE (**FOLLOWING WIRING DIAGRAM**) WITH QUICK CONNECTORS (**INCLUDED**).

***0-10V DIMMING WIRES WILL BE SUPPLIED WITHOUT CONNECTORS.**

B- INSERT THE LED DRIVER INTO THE INSULATION BOX.


C- HOLD THE (2) CLIPS UPWARD AND INSERT FIXTURE INTO THE CUT-OUT.

TRIMLESS MODEL:

C- HOLD THE (2) CLIPS UPWARD AND INSERT FIXTURE INTO CUT-OUT. ONCE INSERTED INTO THE TRIMLESS FRAME, THE CLIPS SPRING BACK DOWN AND THE TRIMLESS FRAME HOOKS WILL HOLD THE FIXTURE IN PLACE.

A + B + C

WIRING DIAGRAM*

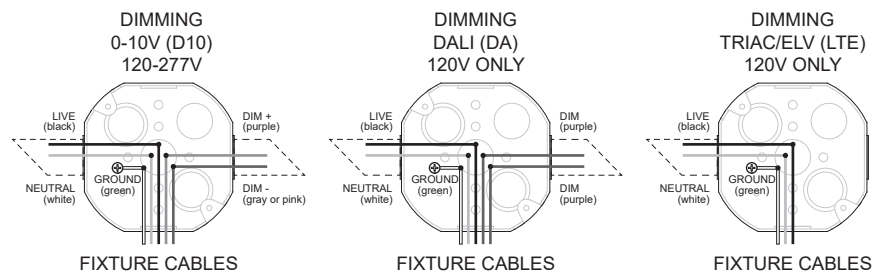

*for reference only

