

# LASER BLADE LARGE

TRIM : ILBL 1/2/3 TR - XXX - XX - XXX - XXXXX  
TRIMLESS : ILBL 1/2/3 TL - XXX - XX - XXX - XXXXX

## INSTALLATION SHEET

PAGE: 1 OF 2


**IMPORTANT** - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

### NEW CONSTRUCTION PLASTER FRAME INSTALLATION


- A - ENGAGE (2) HANGER BARS IN MOUNTING SLOTS AND CONNECT THEM TOGETHER.  
B - FASTEN HANGER BARS TO CEILING STRUCTURE WITH APPROPRIATE SCREWS (NOT INCLUDED).  
PLASTER FRAME MUST BE FLUSH WITH CEILING STRUCTURE.  
C - **FOR TRIMLESS 2 AND 3 HEADS ONLY** - MAKE SURE THE METAL SEPARATOR IS INSTALLED THIS WAY IN THE FRAME BEFORE GOING TO THE NEXT STEPS  
D - INSTALL DRYWALL AND MAKE THE CUT-OUT OPENING (SEE DIMENSIONS BELOW). FOR TRIMLESS, MAKE THE CUT-OUT BEFORE INSTALLING THE DRYWALL. MAKE SURE THE WIRES ARE ACCESSIBLE.  
E - **FOR TRIMLESS ONLY** - ADJUST THE HEIGHT OF THE FRAME AS SHOWN BELOW, USING AN ALLEN KEY (NOT INCLUDED).  
PLASTER FRAME MUST BE FLUSH WITH CEILING STRUCTURE. THE MOUNTING COLLAR MUST PROTRUDE FROM THE CEILING BY 1/16"

A + B

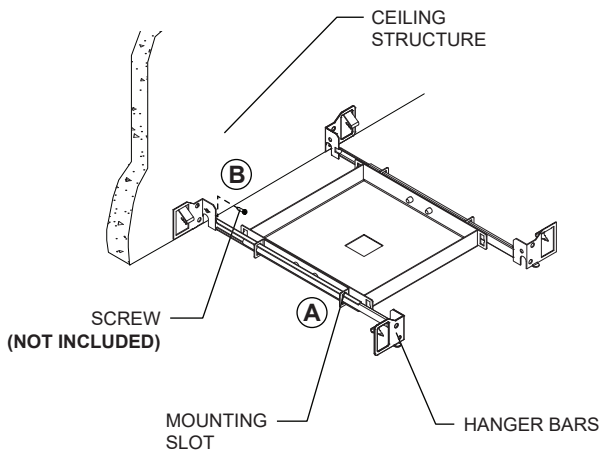


C

FOR TRIMLESS 2 AND 3 HEADS ONLY

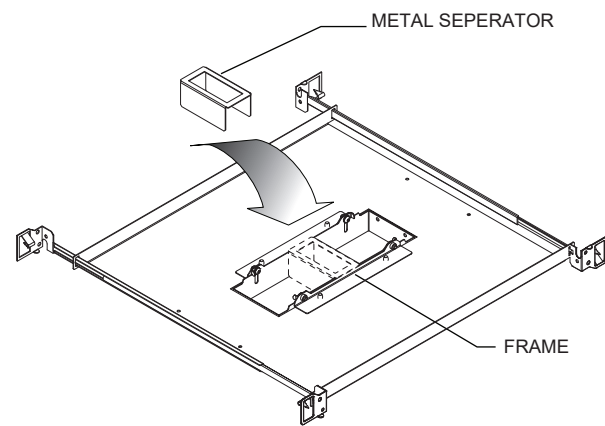


D

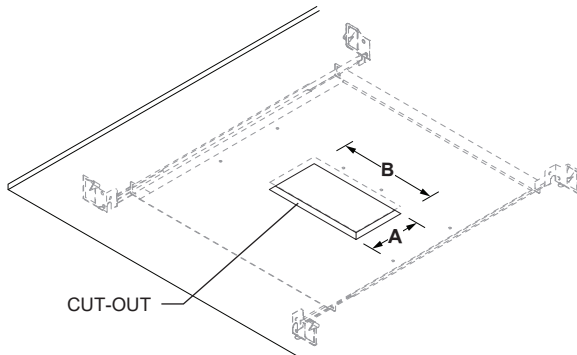

E

FOR TRIMLESS ONLY

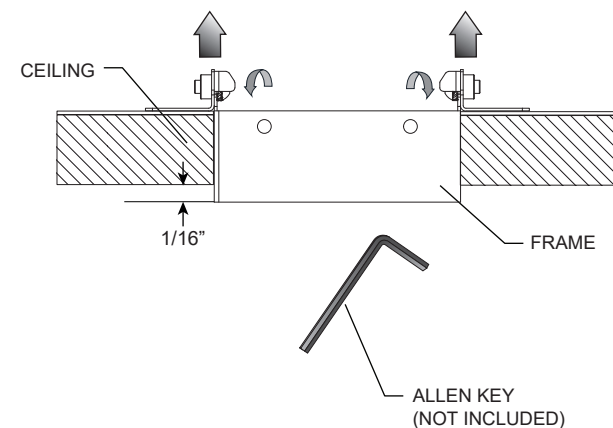

Models	Mounting	Plaster frame	Cut-out dimensions (A x B)	Ceiling thickness	Clearance
LBL1	TRIM	BN5131	3" x 3" (75 x 75mm)	1/8" - 1 1/8" (3mm - 29mm)	6" (152mm)
	TRIMLESS	BN5134	2 5/8" x 2 7/8" (74 x 74mm)	5/8" (16mm)	
LBL2	TRIM	BN5132	5 3/4" x 3" (145 x 75mm)	1/8" - 1 1/8" (3mm - 29mm)	
	TRIMLESS	BN5135	5 5/8" x 2 7/8" (143 x 74mm)	5/8" (16mm)	
LBL3	TRIM	BN5133	8 3/8" x 3" (214 x 75mm)	1/8" - 1 1/8" (3mm - 29mm)	
	TRIMLESS	BN5136	8 1/4" x 2 7/8" (213 x 74mm)	5/8" (16mm)	

INS-5101

LAST UPDATE: MARCH 15, 2019

SB - R0

# LASER BLADE LARGE

TRIM : ILBL 1/2/3 TR - XXX - XX - XXX - XXXXX

TRIMLESS : ILBL 1/2/3 TL - XXX - XX - XXX - XXXXX

## NEW CONSTRUCTION PLASTER FRAME INSTALLATION

F - KEEP THE METAL SEPERATOR IN PLACE AND FINISH THE ASSEMBLY BY PLASTERING, SANDING AND PAINTING.  
TAKE OUT THE METAL SEPERATOR FROM THE FRAME

F

