



IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

I.MD77, I.MD78, I.MD79, I.MD80, I.MN62, I.MN63

STEP 1

- A - ENGAGE HANGER BARS (X4, TYP. PROVIDED) INTO BUTTERFLY BRACKET THROUGH MOST CONVENIENT SLOT.
B - FASTEN HANGER BARS (X4, TYP.) TO CEILING STRUCTURE WITH APPROPRIATE SCREWS (**NOT PROVIDED**).
C - UNCLIP CONNECTION BOX COVER FROM CONNECTION BOX.
D - MAKE ALL NECESSARY CONNECTIONS IN CONNECTION BOX. (**SEE WIRING DIAGRAM**)
E - CLIP CONNECTION BOX COVER ON THE CONNECTION BOX. MAKE SURE ALL ELECTRICAL WIRING IS WELL PLACED IN THE CONNECTION BOX.



BI-XXXX-XXX-IC-D10			
INSULATED BOX HOUSING NUMBER	MODEL	120V OR 277V	INSULATED DIMMING CEILING TYPE
MODEL		MOUNTING	
I.MD77		BI-MXXX-XXX-IC BI-MXXX-XXX-IC-D10 BI-MXXX-XXX-IC-D2B	
I.MD78			
I.MD79			
I.MD80			
I.MN62			
I.MN63			

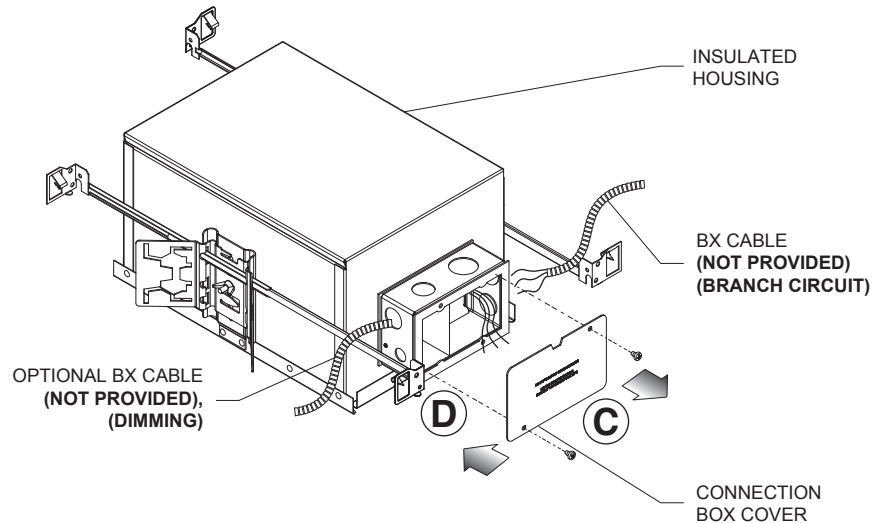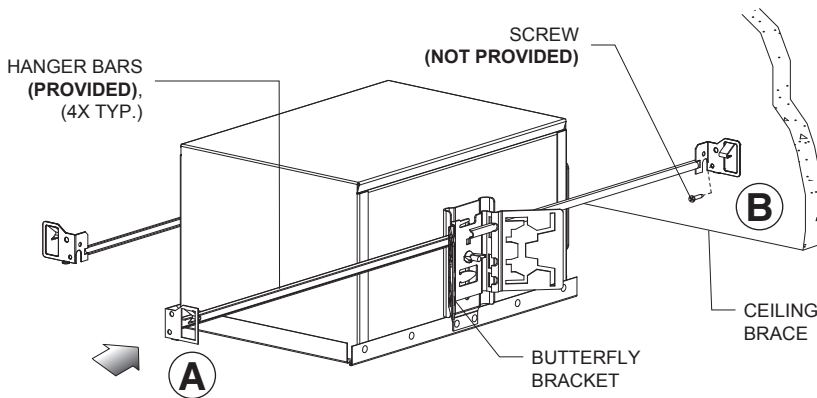

D

LIVE	BLACK
NEUTRAL	WHITE
⏏	GREEN
DIM + / -	PURPLE
DIM -	GRAY

*junction box for reference only

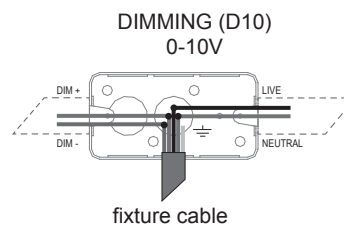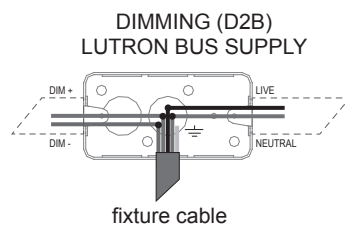

STEP 2

- F - MAKE ALL NECESSARY PLASTER WORK AND MAKE CUT-OUT (**SEE CUT-OUT TABLE**).
G - USE THE PROVIDED CONNECTORS TO CONNECT THE FIXTURE WIRES TO CONNECTION BOX WIRES.
H - INSERT FIXTURE ASSEMBLY IN CUT-OUT BY FIRMLY PUSHING UP BOTH FASTENING HINGES AND INSTALL FIXTURE THROUGH CUT-OUT.

CUT-OUT DIMENSION

Ø4 (Ø100mm)

